





CLUTCH

Inspect every 6 000 km (4 000 miles, 6 months).


- Loosen the locknut ① and turn the adjuster ② all the way into the clutch lever assembly.

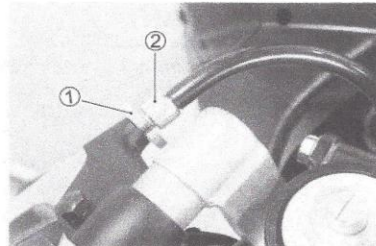

- Remove the engine sprocket cover.

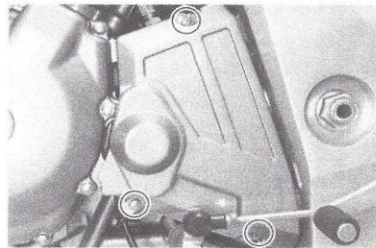

- Loosen the locknut ③ and turn out the adjusting screw ④ two or three rotations.
- From that position, slowly turn the adjuster screw ③ in until it stops.
- Turn the adjuster screw ③ out 1/4 rotation, and tighten the locknut ④.

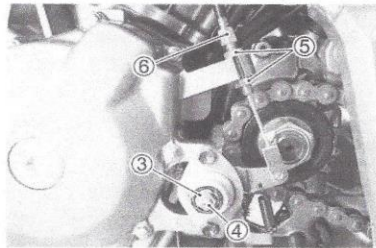

- Loosen the locknuts ⑤, turn the cable adjuster ⑥ to obtain 10 – 15 mm (0.4 – 0.6 in) of free play (A) at the clutch lever end.
- Tighten the locknuts ⑤.

DATA Clutch cable play (A): 10 – 15 mm (0.4 – 0.6 in)
Clutch release screw: 1/4 turn out.

